



Ford Mustang Trunk Lid installation Guide (1994 to 1998 models).

READ ALL THE DIRECTIONS BEFORE INSTALLING MAT.

Tools needed

- drill with 1/4" bit.
- Scratch Awl or Center Punch
- Knife
- Electrical Tape
- Pencil or China Marker



☹☹☹ LEARN FROM OTHERS MISTAKES


Do not attempt to drill the holes in the hood through the mat holes. Drill bit could snag the fabric and start winding it around the bit, and tear the fabric.

Step 1.

On the bottom left corner of the trunk lid, there is a black loom that houses wire for the trunk accessories. You will need to pull this loom away and remove the left retaining clip and the longer clip from the loom. Save the longer clip for later use. You will need to unwrap the tape that holds the smaller clip and use a pointed object to press against the small plastic object that locks the Tywrap around the black loom.



BOTTOM LEFT SIDE

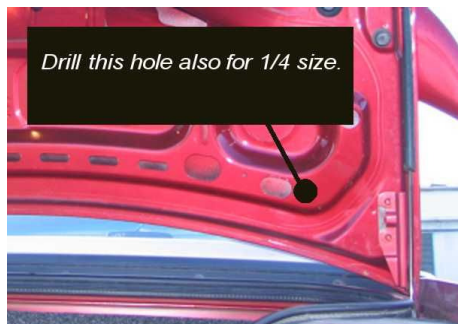


BOTTOM RIGHT SIDE

Step 2.

Once you have loom away from connected area, hold the Trunk-lid mat against the upper trunk lid and adjust to desired fit. Make sure that the holes in the bottom left of the mat and bottom right line up with mat. (May place a pencil in the bottom right and bottom left holes to help with the position of the holes) Once these holes are in line you may mark the holes that will be used for drilling. (It may be easier to have someone assist you) or use **MASKING TAPE (ANY OTHER KIND OF TAPE COULD DAMAGE THE PAINT FINISH)** can be used to hold the mat while adjusting the fit. Next, once the trunk lid mat is adjusted, take the punch Awl and place it in the holes on the trunk-lid mat and gently dimple the area by striking the Awl with the hammer, a pencil can be used to mark the spots then dimple the area to be drilled.

Below are a few pictures to show what holes need to be drilled and the location on these holes.

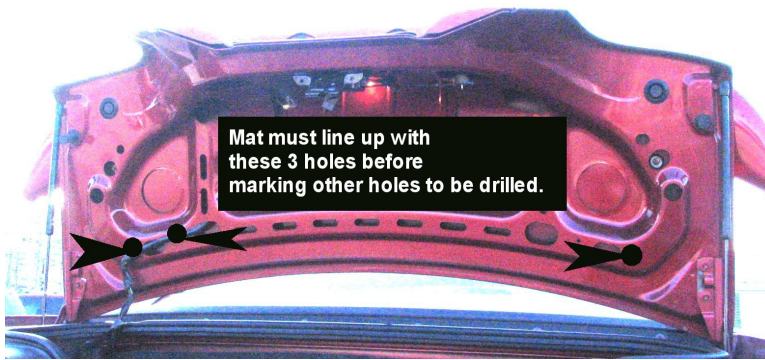


Picture of hole locations....

Fig 3.

Step 3

Check the area to make sure that the holes are not too close to the edge of the expanded metal or fiberglass. If they are too close to the edge of the raised frame, please check fit again. Next, drill the hole locations with the 1/4 drill-bit (Fig 3). Take your time and do not put too much pressure on the drill. If you do, when it "pops" through, you risk creating a BB size dent on the top (exterior) of your trunk-lid. **You may even tape the bit about 1/4 inch from the end of the bit. This will also slow the bit and help prevent it from hitting the bottom side of the deck lid.**

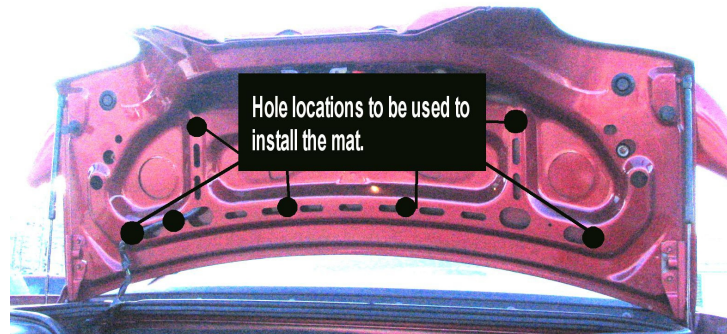

Step 4

Once the 1/4 holes have been drilled, hold the mat up to the trunk-lid and align the holes.

If they do not line up, check to see that the holes were drilled correctly. Take each of the supplied retaining clips and push through the holes on the mat and into the drilled holes when they are sideways or not fitted properly, they make break. These clips are a one-time use and maybe damaged easily when removed without the proper removal tool. **Never attempt to remove the mat pulling on it. This can damage the mat or rip the holes from the mat. Also never hammer the clips in.**

Step 5

Take the longer clip that holds the wire loom and insert it into the correct hole and fasten loom back to it.

The manufacturer of the MDM Mat would like to thank you again for your purchase.

Limited Warranty:

These handcrafted deck lid Mats are warranted for 120-days against defects in workmanship or materials. If you have a problem with your new deck lid mat within this time, please contact granddesignmat@aol.com for assistance. If you have any questions please feel free to contact us also.

The MDM Trunk Mat is made by Grand Designs Copyright 2000 to 2010 Brown Summit NC, NC U.S.A.

Note: This deck lid may contain materials that are not flame resistant. Please keep away from open flames or electrical sources in your vehicle. The manufacturer and websites that sell this item are not responsible for any injury or damage that may result from improper use or improper installation of this product to car nor person(s).